



PRESSURE/TORQUE CONVERSION CHART
4HPAB

PRESSURE IN PSI	FT. LBS.	N-m
1000	202	274
1200	378	512
1400	533	723
1600	628	851
1800	711	964
2000	792	1074
2200	875	1186
2400	963	1306
2600	1044	1415
2800	1129	1531
3000	1214	1646
3200	1299	1761
3400	1384	1876
3600	1474	1998
3800	1558	2112
4000	1646	2232
4200	1726	2340
4400	1816	2462
4600	1896	2571
4800	1983	2689
5000	2076	2815
5200	2156	2923
5400	2243	3041
5600	2329	3158
5800	2411	3269
6000	2501	3391
6200	2587	3508
6400	2672	3623
6600	2757	3738
6800	2843	3855
7000	2928	3970
7200	3017	4091
7400	3100	4203
7600	3180	4312
7800	3268	4431
8000	3353	4546
8200	3438	4661
8400	3524	4778
8600	3611	4896
8800	3696	5011
9000	3784	5130
9200	3866	5242
9400	3956	5364
9600	4043	5482
9800	4128	5597
10000	4217	5717

